



Schaltangaben																																		
Schalter	1	2	3	4	5	7	11	12	13	14	15	23	24	25	401	402	403	404	412	507	511	801	802	804	G11	G12	G23	G24	M1	W11	W12	W13		
Grundstellung																																		
Bedienungsort	der Fernsteuerung der Ortssteuerung		Zes Leipzig																								techn. Stelle DB InfraGo							
			der Fernwirkunterstation: im ESTW-A																															
Einbauort, Mastnummer			8-7	8-8	5-27	5-28	8-6	6-36	P7-39	P7-40	6-9	6-11	P8-3	0-6	0-7	5-34	7-31	8-1	6-12	6-2	6-51	6-44	P7-2	6-39	6-29	6-10	P8-1	P8-2	0-14	0-15	6-45	6-8	6-38	7-43